# **RIVKLE<sup>®</sup>** Parallel guide

Parallel guide for RIVKLE® setting tools P2005/P1007/P2007/P2007 PN.

Technical information can be found on the last page.





Article number	Load	For
	capacity	tool type
28259010664	2.2 - 4 kg	P2005, P1007, P2007, P2007 PN



Böllhoff Group · Archimedesstr. 1-4 · 33649 Bielefeld · Phone: +49 521 4482-1387 · fat@boellhoff.com · eshop.boellhoff.de/en/home


This document was generated automatically. Subject to technical changes and errors. Distribution as well as duplication of this document, its utilisation and communication of its content only permitted with express consert.

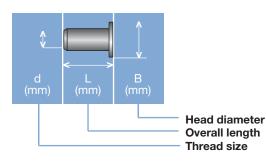

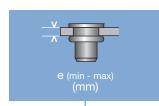


## Grip range

Defines the range of total thickness of the customers part (even if it consists of more than one layer)

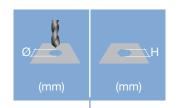

Hole geometry If round -> diameter If hexagonal -> wigth across flats

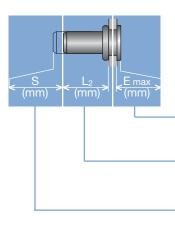

#### Head projection after setting

Variable according to the application (setting load, material substrate, etc.)

## Blind side projection after installation

Defines the clearance needed on the blind side (cannot be used for quality control)

### Setting stroke

Difference of total length before and after installation



\*in accordance to chosen RIVKLE®\*



All technical data refer to the measure mm

**Böllhoff Group** • Archimedesstr. 1-4 • 33649 Bielefeld • Phone: +49 521 4482-1387 • fat@boellhoff.com • eshop.boellhoff.de/en/home This document was generated automatically. Subject to technical changes and errors. Distribution as well as duplication of this document, its utilisation and communication of its content only permitted with express consert.